

400 W. Artesia Blvd.
Compton, CA 90220
Fax: (310) 747-3912
Ph: 1-800-776-0767
E-Mail: info@procompusa.com
Website: www.procompusa.com

Latest Revision
7.22.2013



off-road driven!™

PRO COMP SUSPENSION

Important: On some vehicles the driver's side OE chassis wire harness that connects to the ABS wire may be shorter, from the factory, than others. If the line needs to be extended GM #19149296 (ACD#PT2232) can be installed into the chassis wire harness.

IMPORTANT!: This system is designed for installation on both 4WD and 2WD models. For installation on 2WD models, disregard any and all steps involving the front differential & mounts, frame cutting, front driveshaft and C.V. shaft removal or installation.

**Part # K1154B/K1154BMX/
K1154BP/K1154BPS/K1154BPX
51014B/51014BMX/
51014BP/51014BPS/51014BPX
6" 2014 & Up Chevrolet
Silverado 4WD/2WD Lift Kit
W/ Steel Knuckles**

**Part # K1155B/K1155BMX/
K1155BP/K1155BPS/K1155BPX
51015B/51015BMX/
51015BP/51015BPS/51015BPX
6" 2014 & Up Chevrolet
Silverado 4WD/2WD Lift Kit
W/Aluminum Knuckles**

This document contains very important information that includes warranty information and instructions for resolving problems you may encounter. Please keep it in the vehicle as a permanent record.

Part #	Description	Qty.	Illus.	Page
90-3341	REAR AXLE BRAKE LINE RELOCATION BRACKET	1	-	-
90-6299	HARDWARE PACK: Rear Brake Line	1	-	-
70-0311001500	5/16" X 1" GR.5 HEX BOLT	2	-	-
72-03100100512	5/16" NYLOCK NUT	2	-	-
73-03100030	5/16" SAE FLAT WASHER	4	-	-
13-90087	9/16" U-BOLT	4	19	21
20-65302	HARDWARE PACK: U-Bolts	1	-	-
13-30330	9/16" FLAT WASHER	8	19	21
13-10423	9/16" HIGHNUT	8	19	21
95-501	5" REAR LIFT BLOCK	2	19	21
91-9480	DIFF MOUNT: Drvr- 4WD only	1	4,8	11,13
91-9483	DIFF MOUNT: Pass- 4WD only	1	5,8	11,13
91-2645	REAR BUMP STOP SPACER	2	20	22
90-6521	HARDWARE PACK: Bump Stop Spacer	1	-	-
70-0311001800	10mm-1.5 X 75mm HEX BOLT	2	-	-
91-9486	SKID PLATE	1	17	19
90-6939	HARDWARE PACK: Skid Plate	1	-	-
70-0371001800	3/8"-16 X 1 HEX BOLT GR. 8	4	17	19
73-03700042	3/8" SAE FLAT WASHER GR. 8	4	17	19
90-6940	HARDWARE PACK: Skid Plate Spacer	1	-	-
90-9487	OE SKID PLATE SPACER ROUND	1	-	-
90-9488	OE SKID PLATE SPACER	1	-	-
90-4077	CV SPACER- 4WD only	2	11	14
90-6513	HARDWARE PACK: Diff Mount Drvr Crossmember- 4WD only	1	-	-
70-0311001800	5/16"-18 X 1 HEX BOLT GR.	4	8	13
72-031100816	5/16"-18 NYLOCK NUT .	4	8	13
73-04300034	5/16" SAE FLAT WASHER GR. 8	8	8	13
90-6514	HARDWARE PACK: Diff Mount Drvr - 4WD only	1	-	-
70-0501751800	1/2"-13 X 1 3/4" HEX BOLT GR. 8	2	6	12
72-050100816	1/2"-13 STOVER NUT	2	6	12
73-05000034	1/2" SAE FLAT WASHER GR. 8	4	6	12
90-6251	HARDWARE PACK: Differential - 4WD only	1	-	-
70-0564001800	9/16"-12 X 4" HEX BOLT GR. 8	1	8	13
70-0561751800	9/16"-12 X 1 3/4" HEX BOLT GR. 8	2	6	12
72-056100816	9/16"-12 STOVER NUT	3	6,8	12,13
73-05600034	9/16" SAE FLAT WASHER GR. 8	4	6,8	12,13
73-05600034	9/16" HARDENED FLAT WASHER	2	6,8	12,13
70-0563001800	7/16"-14 X 3" HEX BOLT GR. 8	1	3	10
72-056100816	7/16"-14 STOVER NUT	1	3	10
73-05600034	7/16" SAE FLAT WASHER GR. 8	2	3	10
71-100601251000	M10-1.5 X 60 HEX BOLT GR. 10.9	16	3	10
73-01008840	M10 USS FLAT WASHER	16	3	10
90-3957	5/16" REAR SPRING SPACER	4	19	21

Box 2 of 6-PN 51014B-2

Part #	Description	Qty.	Illus.	Page
90-4570	KNUCKLE: Drvr	1	-	-
90-4571	KNUCKLE: Pass	1	-	-
90-6522	HARDWARE PACK: Adel Clamps	1	-	-
90-3240	ADEL CLAMP	2	14	16
90-6439	HARDWARE PACK: Tie Rod Jam Nut	1	-	-
.160FNFJZ	16mm-1.5 HEX JAM NUT	2	-	-
90-6709	HARDWARE PACK: Spare Tire Wheel Spacer	1	-	-
90-3950	SPARE TIRE WHEEL SPACER	2	-	-

Or Box 2 of 6-PN 51015B-2

90-4573	KNUCKLE: Drvr	1	-	-
90-4574	KNUCKLE: Pass	1	-	-
90-6522	HARDWARE PACK: Adel Clamps	1	-	-
90-3240	ADEL CLAMP	2	14	16
90-6439	HARDWARE PACK: Tie Rod Jam Nut	1	-	-
.160FNFJZ	16mm-1.5 HEX JAM NUT	2	-	-
90-6709	HARDWARE PACK: Spare Tire Wheel Spacer	1	-	-
90-3950	SPARE TIRE WHEEL SPACER	2	-	-

Box 3 of 6-PN 51014B-3

91-9490	REAR CROSSMEMBER	1	9	14
91-2319	COMPRESSION STRUTS	2	16	18
90-6234	HARDWARE PACK: Compression Strut	1	-	-
70-0501251800	1/2" X 1 1/4" GR. 8 HEX BOLT	2	16	18
70-0504001800	1/2" X 4" GR. 8 HEX BOLT	4	16	18
72-050100816	1/2" GR. 8 STOVER NUT	4	16	18
73-05000034	1/2" SAE HARDENED FLAT WASHER	1	16	18
90-3353	COMPRESSION STRUT NUT PLATE	2	16	18
91-1104	COMPRESSION STRUT MOUNT	2	16	18
90-6263	HARDWARE PACK: Compression Struts	1	-	-
15-11148	COMPRESSION STRUT BUSHING	8	16	18
90-2109	SLEEVE, COMPRESSION STRUT	4	16	18

Box 4 of 6-PN 51014B-4

91-3684	FRONT CROSSMEMBER	1	7	12
90-6284	HARDWARE PACK: Crossmember	1	-	-
70-0624501800	5/8"-11 x 4 1/2" HEX BOLT GR. 8	2	10	14
70-0625501800	5/8"-11 X 5 1/2" BOLT GR. 8	2	10	14
72-06200100512	5/8"-11 STOVER NUT	4	10	14

Part #	Description	Qty.	Illus.	Page
73-06200030	5/8" SAE FLAT WASHER	8	10	14
90-6498	HARDWARE PACK: Sway Bar Drop	1	-	-
71-100301251000	10mm-1.5 X 30mm 10.9 HEX BOLT	4	15	17
73-01010930	10mm 10.9 FLAT WASHER	8	15	17
72-043100816	10mm STOVER NUT	4	-	-
70-0432501800	7/16"-14 X 2 1/2" GR. 8 HEX BOLT	4	15	17
72-043100816	7/16"-14 STOVER NUT	4	15	17
73-04300034	7/16" SAE FLAT WASHER	8	15	17
91-3632	SWAY BAR DROP- Drvr	1	15	17
91-3635	SWAY BAR DROP- Pass	1	-	-
90-7734	FRONT BRAKE LINE DROP BRACKET- Drvr	1	14	16
90-7735	FRONT BRAKE LINE DROP BRACKET- Pass	1	14	16
90-6517	HARDWARE PACK: Brake Line Bracket	1	-	-
70-0313751800	5/16" X 1" GR. 8 HEX BOLT	2	14	16
73-03100830	5/16" FLAT WASHER	4	14	16
72-031100816	5/16" GR. 8 STOVER NUT	2	14	16
70-0251001800	1/4" X 1.0" GR. 8 HEX BOLT	4	14	16
73-02500830	1/4" FLAT WASHER	8	14	16
72-025100816	1/4" GR. 8 NYLOCK NUT	4	14	16
-Not used-	#10-24 X 3/4" PHILLIPS MACHINE SCREW	4	14	16
-Not used-	#10-24 PLATED NYLOCK WASHER	4	14	16
-Not used-	#10 WASHERS	8	14	16
-Not used-	#8 X 3/4" HEX BOLT (w/ loose "fender" washer on bolt)	8	14	16
90-6515	HARDWARE PACK: Front Differential Support Bracket- 4WD only	1	-	-
15-11148	BUSHING, DIFFERENTIAL MOUNT	2	3	10
90-2108	SLEEVE, DIFFERENTIAL MOUNT-2.39"	1	3	10
90-6941	HARDWARE PACK: Front Diff Mount Tabs - 4WD only	1	-	-
91-9489	FRONT DIFFERENTIAL MOUNT TABS	2	8	13
91-3692	FRONT DIFFERENTIAL SUPPORT BRACKET- 4WD only	1	3	10
90-6942	HARDWARE PACK: ABS Bracket	1	-	-
90-9496	ABS LINE RELOCATION BRACKET	2	14	16
72-025100512	1/4" SAE FLAT WASHER	4	14	16
72-025100512	1/4" NYLOCK NUT	4	14	16
Box 5 of 6-PN 51099B-5				
13127-1	ADD-A-LEAF	2	19	21
90-3825	HARDWARE PACK: Add-a-leaf	1	-	-
97-380	3/8" X 4 1/2" CENTER BOLT	2	19	21
8337-1	3/8" CENTER BOLT LOCK NUT	2	19	21
98-00250-1	2 1/2" SPRING CLAMP	4	19	21
98-00250-2	2 1/2" SPRING PLATE	4	19	21

Box 6 of 6-PN 51007B-6

Part #	Description	Qty.	Illus.	Page
928001	ES 9000 SHOCK	2	-	-
91-2614	STRUT SPACER	2	13	15
90-6317	HARDWARE PACK: Spacer Mount	1	-	-
72-043200810	7/16-20 GR. 8 PLATED HEX NUT	6	13	15
73-04300830	7/16 SAE FLATWASHER ZINC	6	13	15
73-04300836	7/16 SPLIT LOCK WASHER	6	13	15
<p style="border: 1px solid black; padding: 2px; display: inline-block;">Or Box 6 of 7-PN 51007BMX-6</p>				
624000	COIL OVER	1	12	15
90-6327	HARDWARE PACK: Spacer Mount	1	-	-
72-0432501800	7/16" X 2 1/2" GR. 8 HEX BOLT	2	12	15
73-04300830	7/16" SAE FLATWASHER ZINC	4	12	15
73-04300816	7/16" STOVER NUT	2	12	15
90-6492	HARDWARE PACK: Coil over mounting spacers	1	-	-
90-2433	UPPER SPACERS: -10 Mono Ball Spacer	4	12	15
91-3712	COIL OVER MOUNT: Upper Bracket	1	12	15
90-6317	HARDWARE PACK: Spacer Mount	1	-	-
72-043200810	7/16-20 GR. 8 PLATED HEX NUT	6	12	15
73-04300830	7/16 SAE FLATWASHER ZINC	6	12	15
73-04300836	7/16 SPLIT LOCK WASHER	6	12	15
MX6098	MX6 SHOCKS	1	-	-
90-6587	HARDWARE PACK: Coil Over Spacer	1	-	-
91-3956	1/4" Spacer	2	12	15
<p style="border: 1px solid black; padding: 2px; display: inline-block;">Box 7 of 7-PN 51007BMX-7</p>				
624000	COIL OVER	1	12	15
90-6327	HARDWARE PACK: Spacer Mount	1	-	-
72-0432501800	7/16" X 2 1/2" GR. 8 HEX BOLT	2	12	15
73-04300830	7/16" SAE FLATWASHER ZINC	4	12	15
73-04300816	7/16" STOVER NUT	2	12	15
90-3010	COIL OVER WRENCH LARGE	1	-	-
90-3011	COIL OVER WRENCH SMALL	1	-	-
90-6318	HARDWARE PACK: Coil Over Mount	1	-	-
70-0502751800	1/2"-13 X 2 3/4" BOLT	2	12	15
73-05000830	1/2" SAE FLATWASHER ZINC	4	12	15
72-050100816	1/2-13 UNITORQUE NUT GR. C Z	2	12	15
91-3712	COIL OVER MOUNT: Upper Bracket	1	12	15
MX6098	MX6 SHOCKS	1	-	-

Box 6 of 6-PN 51007BPS-6

Part #	Description	Qty.	Illus.	Page
ZX2001	PRO RUNNER MONOTUBE SHOCK	2	-	-
91-2614	STRUT SPACER	2	13	15
90-6317	HARDWARE PACK: Spacer Mount	1	-	-
72-043200810	7/16-20 GR. 8 PLATED HEX NUT	6	13	15
73-04300830	7/16 SAE FLATWASHER ZINC	6	13	15
73-04300836	7/16 SPLIT LOCK WASHER	6	13	15

Box 6 of 6-PN ZX2002 (x2)

ZX2002-1	MONOTUBE SHOCK	1	-	-
90-4449	SPRING SEAT	1	-	-

Box 6 of 6-PN 51007BP-6

ZX2001	PRO RUNNER MONOTUBE SHOCK	2	-	-
91-2614	STRUT SPACER	2	13	15
90-6317	HARDWARE PACK: Spacer Mount	1	-	-
72-043200810	7/16-20 GR. 8 PLATED HEX NUT	6	13	15
73-04300830	7/16 SAE FLATWASHER ZINC	6	13	15
73-04300836	7/16 SPLIT LOCK WASHER	6	13	15

Box 6 of 7-PN 51007BPX-6

624000	COIL OVER	1	12	15
90-6327	HARDWARE PACK: Spacer Mount	1	-	-
72-0432501800	7/16" X 2 1/2" GR. 8 HEX BOLT	2	12	15
73-04300830	7/16" SAE FLATWASHER ZINC	4	12	15
73-04300816	7/16" STOVER NUT	2	12	15
90-6492	HARDWARE PACK: Coil over mounting spacers	1	-	-
90-2433	UPPER SPACERS: -10 Mono Ball Spacer	4	12	15
91-3712	COIL OVER MOUNT: Upper Bracket	1	12	15
90-6317	HARDWARE PACK: Spacer Mount	1	-	-
72-043200810	7/16-20 GR. 8 PLATED HEX NUT	6	12	15
73-04300830	7/16 SAE FLATWASHER ZINC	6	12	15
73-04300836	7/16 SPLIT LOCK WASHER	6	12	15
ZX2001	PRO RUNNER MONOTUBE SHOCK	1	-	-
90-6587	HARDWARE PACK: Coil Over Spacer	1	-	-
90-3956	1/4" Spacer	2	12	15

Box 7 of 7-PN 51007BPX-7

624000	COIL OVER	1	12	15
90-6327	HARDWARE PACK: Spacer Mount	1	-	-
72-0432501800	7/16" X 2 1/2" GR. 8 HEX BOLT	2	12	15
73-04300830	7/16" SAE FLATWASHER ZINC	4	12	15
73-04300816	7/16" STOVER NUT	2	12	15

Part #	Description	Qty.	Illus.	Page
90-3010	COIL OVER WRENCH LARGE	1	-	-
90-3011	COIL OVER WRENCH SMALL	1	-	-
90-6318	HARDWARE PACK: Coil Over Mount	1	-	-
70-0502751800	1/2"-13 X 2 3/4" BOLT	2	12	15
73-05000830	1/2" SAE FLATWASHER ZINC	4	12	15
72-050100816	1/2-13 UNITORQUE NUT GR. C Z	2	12	15
91-3712	COIL OVER MOUNT: Upper Bracket	1	12	15
ZX2001	PRO RUNNER MONOTUBE SHOCK	1	-	-

Optional Equipment Available from your Pro Comp Distributor!

51246: 2007-2009 & 2014 Driveshaft: 37.8" Long*
51247: 2010-2013 Driveshaft: 36.8" Long*

Also, check out our outstanding selection of Pro Comp tires to compliment your new installation!

- On some vehicles the driver's side OE chassis wire harness that connects to the ABS wire may be shorter, from the factory, than others. If the line needs to be extended GM #19149296 (ACD#PT2232) can be installed into the chassis wire harness.
 - Front end and head light realignment is necessary!
 - Speedometer and ABS recalibration will be necessary if larger tires (10% more than stock diameter) are installed.
- ⇒ **Due to differences in manufacturing, dimensions and inflated measurements, tire and wheel combinations should be test fit prior to installation. Tire and wheel choice is crucial in assuring proper fit, performance, and the safety of your Pro Comp equipped vehicle. For this application, we recommend a 17" or larger wheel not to exceed 8" in width with a maximum backspacing of 4.5" must be used. Additionally, a quality tire of radial design, not exceeding 35" tall X 12.5" wide is also recommended. Please note that the use of a 35" X 12.5" tire may require modification to the front valance. Violation of these recommendations will not be endorsed as acceptable by Pro Comp Suspension and will void any and all warranties either written or implied.**

Introduction:

- ◆ This installation requires a professional mechanic!
- ◆ We recommend that you have access to a factory service manual for your vehicle to assist in the disassembly and reassembly of your vehicle. It contains a wealth of detailed information.
- ◆ Ensure that your work space is of adequate size and the work surface is level. Place the vehicle in neutral. Place your floor jack under the front cross member and raise vehicle. Place jack stands under the frame rails behind the front wheel wells and lower the frame onto the stands. Remove the jack and place the vehicle back in gear, set the emergency brake, and place blocks both in front and behind the rear wheels.
- ◆ Prior to installation, carefully inspect the vehicle's steering and driveline systems paying close attention to the tie rod ends, ball joints, wheel bearing preload, pitman and idler arm. Additionally, check steering-to-frame and suspension-to-frame attaching points for stress cracks. The overall vehicle must be in excellent working condition. Repair or replace all worn or damaged parts!
- ◆ Read the instructions carefully and study the illustrations before attempting installation! You may save yourself a lot of extra work.
- ◆ Check the parts and hardware against the parts list to assure that your kit is complete. Separating parts according to the areas where they will be used and placing the hardware with the brackets before you begin will save installation time.
- ◆ Check the special equipment list and ensure the availability of these tools.
- ◆ Secure and properly block vehicle prior to beginning installation.
- ◆ **ALWAYS** wear safety glasses when using power tools or working under the vehicle!
- ◆ Use caution when cutting is required under the vehicle. The factory undercoating is flammable. Take appropriate precautions. Have a fire extinguisher close at hand.
- ◆ Foot pound torque readings are listed on the Torque Specifications chart at the end of the instructions. These are to be used unless specifically directed otherwise. Apply Loctite® retaining compound where specified.
- ◆ ***Please note that while every effort is made to ensure that the installation of your Pro Comp lift kit is a positive experience, variations in construction and assembly in the vehicle manufacturing process will virtually ensure that some parts may seem difficult to install. Additionally, the current trend in manufacturing of vehicles results in a frame that is highly flexible and may shift slightly on disassembly prior to installation. The use of pry bars and tapered punches for alignment is considered normal and usually does not indicate a faulty product. However, if you are uncertain about some aspect of the installation process, please feel free to call our tech support department at the number listed on the cover page. We do not recommend that you modify the Pro Comp parts in any way as this will void any warranty expressed or implied by the Pro Comp Suspension company.***

SPECIAL EQUIPMENT

Please refer to your service manual for more information. These tool may be purchased at your local GM dealer.

1. A special removal tool is required for safe removal of the tie rods. (Tie rod puller # **J6627-A**)
2. A special removal tool is required for safe removal of the ball joints. (Ball joint separator tool # **J23742**)

You may be able to rent any of these tools at your local parts store.


FRONT INSTALLATION:

1. Position your vehicle on a smooth, flat, hard surface (i.e. concrete or asphalt). Block the rear tires and set the emergency brake.
2. Measure and record the distance from the center of each wheel to the top of its fender opening. Record below.

LF: _____ RF: _____

LR: _____ RR: _____

3. Place the vehicle in neutral. Place your floor jack under the front axle and raise the vehicle. Place jack stands under the frame rails and lower the frame onto the stands. Remove the jack and place the vehicle back in gear, set the emergency brake, and place blocks both in front and behind the rear wheels.
4. Remove the front wheels from the vehicle.
5. Unbolt and remove the OE skid plate. Save hardware for reinstallation.
6. Unclip the ABS bracket from coil bucket and A-arm. Unplug the ABS connector.
7. Unbolt the ABS strap from the steering knuckle. Secure the ABS wire out of the work area. Discard the bracket.
8. Using pliers carefully open the a-arm brake line retaining bracket. Remove the rubber brake hose from the bracket. Using a cut off wheel, cut the bracket at the bend.

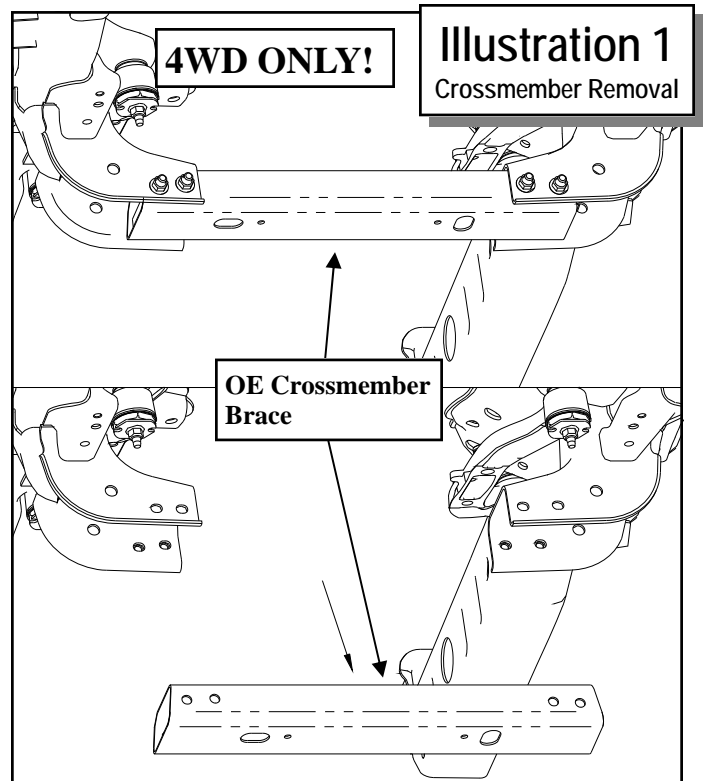

NOTE: Be very careful to not damage the rubber line in any way during it's removal from the bracket.

9. Unbolt the brake line bracket from the upper A-arm.
10. Using the proper tool carefully separate the outer tie rod end from the knuckle.
11. Remove the brake caliper and caliper bracket assembly and the rotor. Secure them clear from the work area. **DO NOT** let the caliper hang by

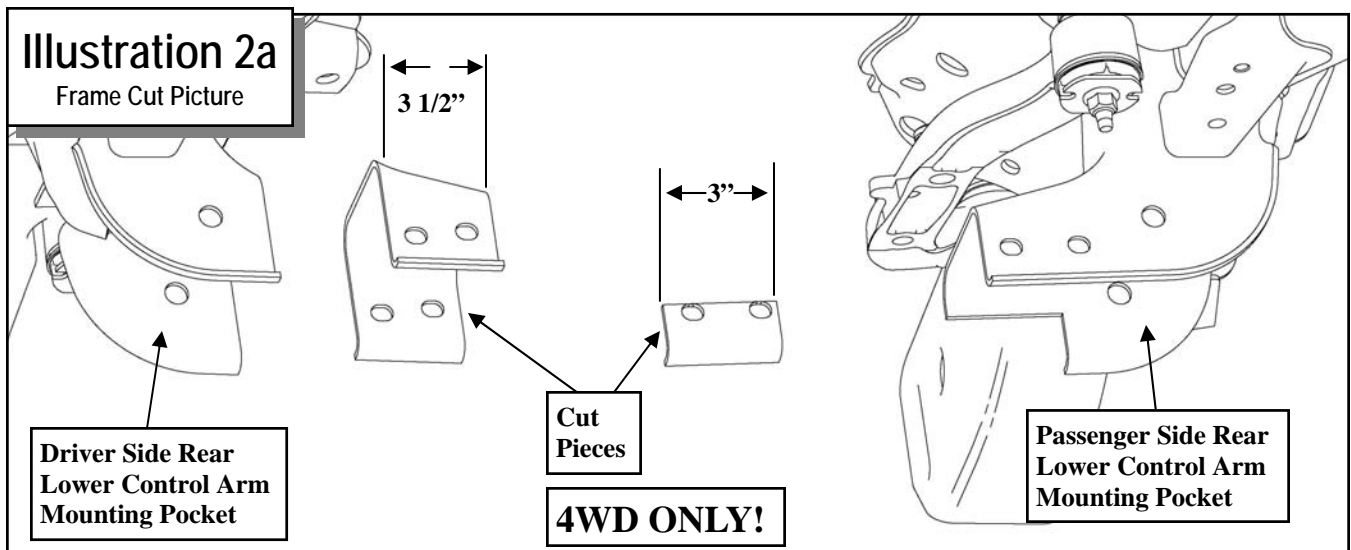


Illustration 2b
Front Differential Case Trim

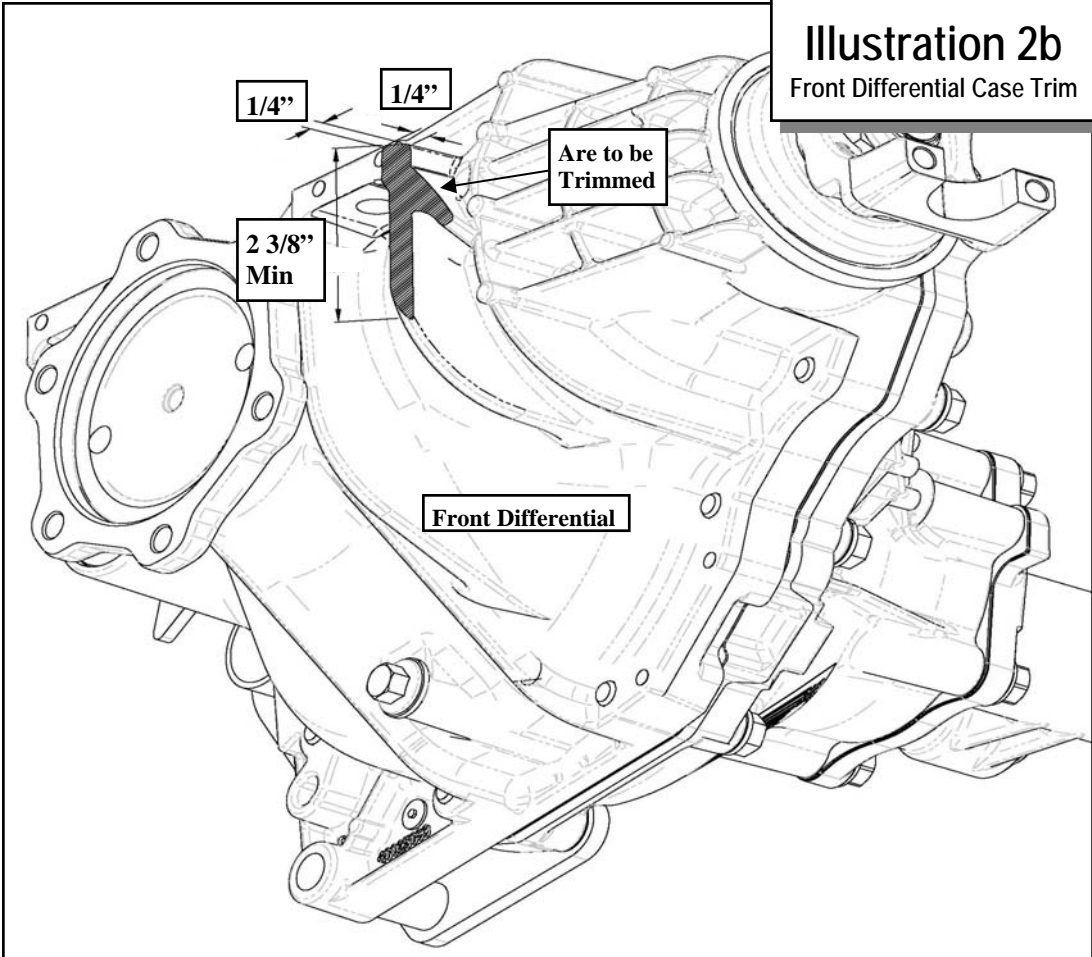
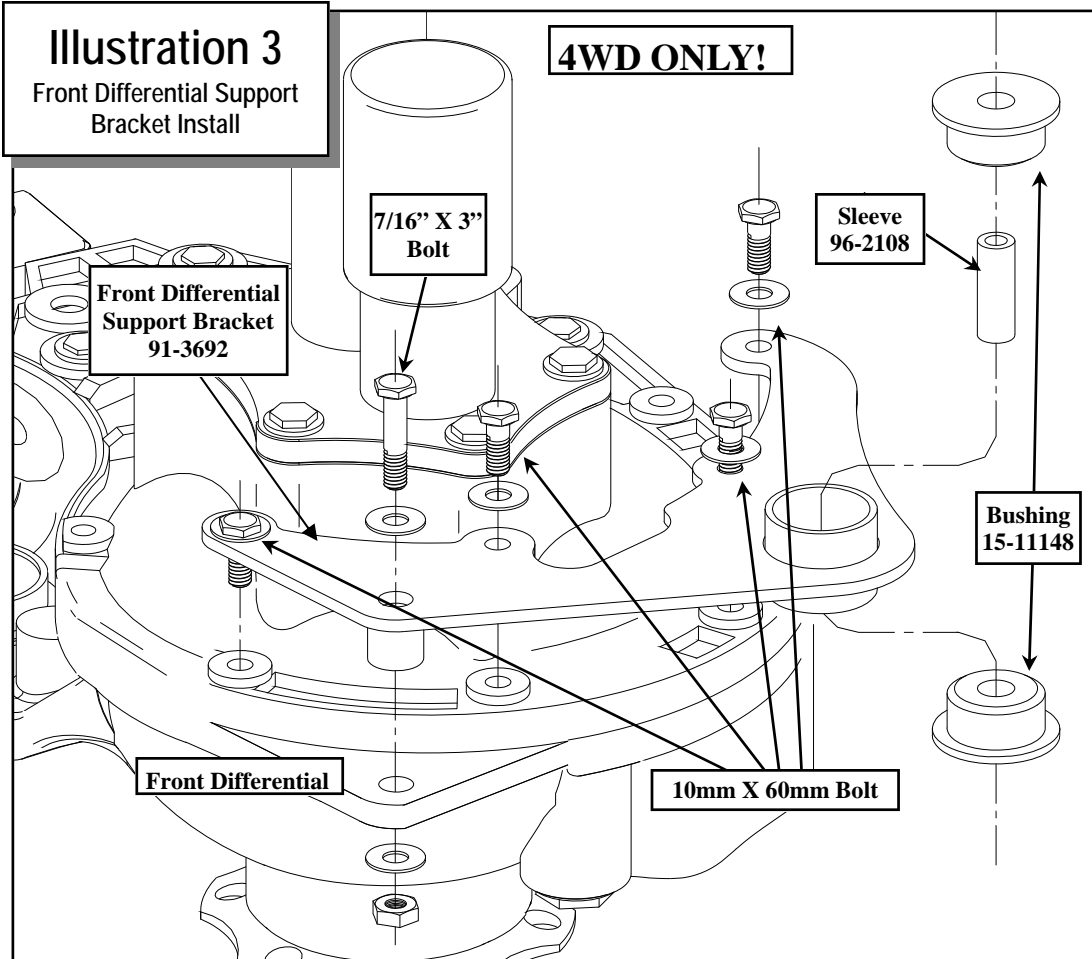


Illustration 3
Front Differential Support
Bracket Install



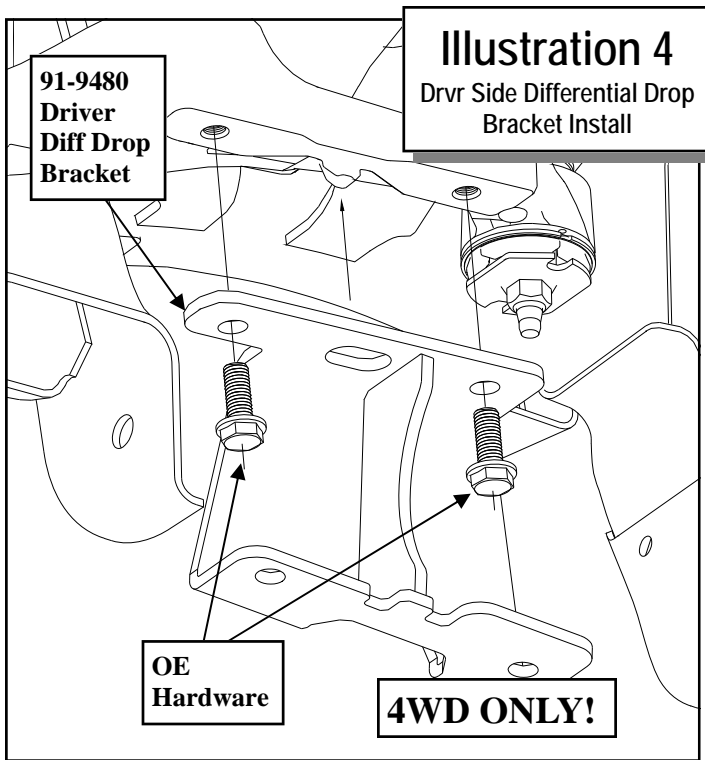


Illustration 4

Drvr Side Differential Drop Bracket Install

the brake line or damage may result.

12. Mark the orientation of the sway bar and remove it from the vehicle.
13. Unbolt and remove the sway bar end links from the vehicle.



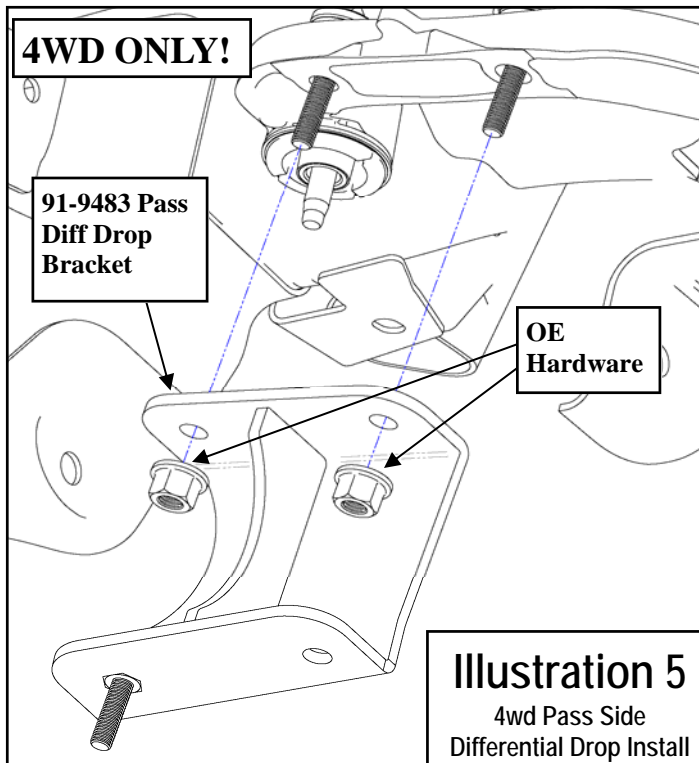


Illustration 5

4wd Pass Side Differential Drop Install

14. Unbolt the CV axle from the differential.
15. Using the proper tool carefully separate the upper ball joint from the knuckle. Loosen but **DO NOT** remove the retaining nut from the upper ball joint.
16. Support the lower control arm with a jack and unbolt the lower strut mounting bolts from the lower control arm mount.
17. Unbolt the lower control arm retaining bolts
18. Unbolt the previously loosened upper ball joint retaining nut and remove the lower control arm, knuckle and CV axle assembly from the vehicle.
19. Remove the clips that hold the ABS wire to the upper strut mounting studs.
20. Unbolt the nuts on the upper strut mounting studs. Carefully remove the strut from the vehicle.
21. Unbolt the front driveshaft from the differential and secure it out of the way of the work area. Save the hardware for reuse.
22. Unplug the differential wiring harness clips and vent tube.
23. Remove the factory rear crossmember support brace from the vehicle and discard. See ILLUSTRATION 1.
24. Support the differential with a jack and unbolt the driver and passenger side mounts (2 per side). Carefully remove the differential from the vehicle.
25. On the driver side, measure out from the edge of the rear factory crossmember brace mount approximately 3 1/2" and scribe a line. See ILLUSTRATION 2a.
26. On the passenger side, measure out from the edge of the rear factory crossmember brace mount approximately 3" and scribe a line. See ILLUSTRATION 2a.
27. Referring to ILLUSTRATION 2b, mark the driver side fin portion of the front differential. This fin area will need to be trimmed to provide adequate clearance once the differential is reinstalled.
28. Using a suitable cutting tool, (abrasive cutoff wheel, Sawz-all, etc.), carefully trim off the

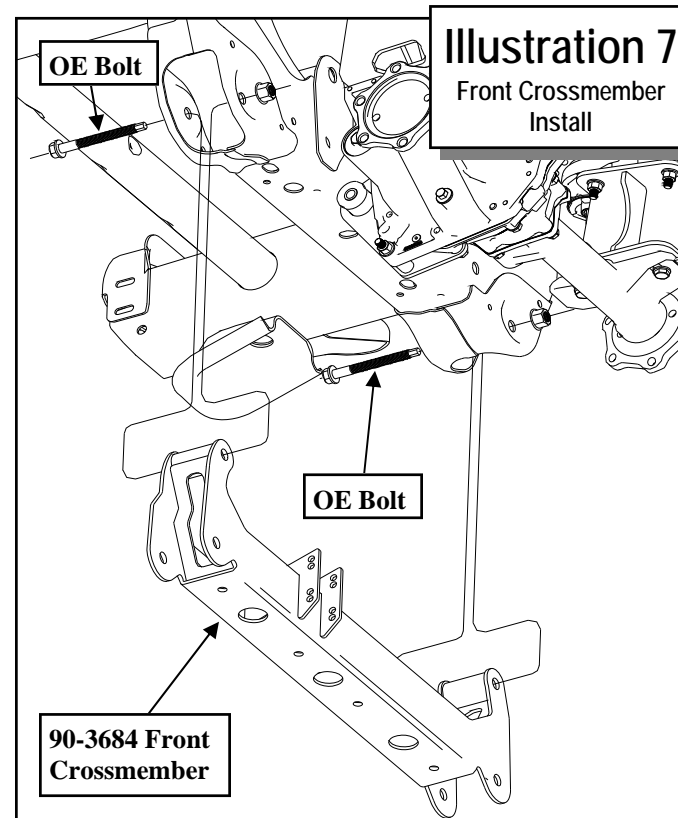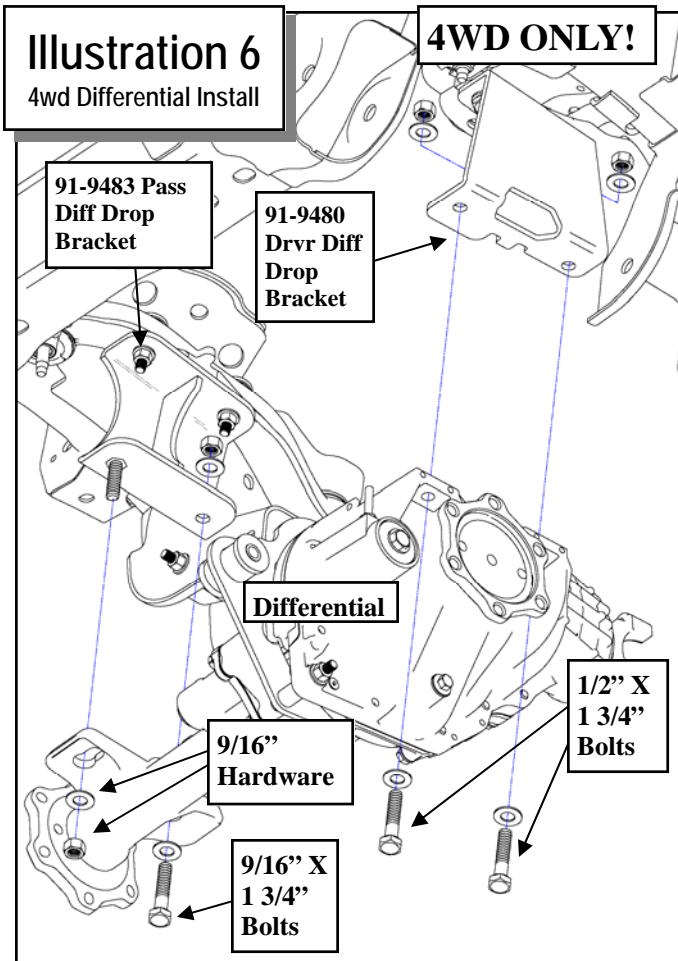

marked fin area. Do not cut into the housing. See ILLUSTRATION 2b.

29. Using a suitable cutting tool, (abrasive cutoff wheel, Sawz-all, etc.) cut the frame along the previously marked lines as shown in ILLUSTRATION 2.
30. Assemble the front differential support bracket (91-3692) using the supplied bushings (15-11148) and sleeves (90-2108) from hardware pack (90-6515). See ILLUSTRATION 3.
31. Rotate the front differential until the case bolt heads are oriented up. Carefully remove the factory bolts from the differential as shown in ILLUSTRATION 3.

NOTE: You may notice some differential oil seeping from the area where the bolts are removed. This is normal and not something to worry about.


If you do not stand the differential as directed, you will see a LOT more oil on your floor.

32. Place front differential support bracket (91-3692) on the front differential as shown in ILLUSTRATION 3. Secure support bracket using the supplied 10mm X 60mm bolts and washers, 7/16" X 3" bolt and hardware from pack 90-6251. Torque these fasteners to 32 ft. lbs. See ILLUSTRATION 3.

33. Install the driver side differential drop (91-9480) into the factory frame location using the OE bolts and hardware. Hand tighten only. ILLUSTRATION 4.
34. Using the OE hardware, install the passenger side differential drop (91-9483) to the factory frame location as shown in ILLUSTRATION 5.

IMPORTANT: The bracket is slightly tapered. The short end of the taper is oriented toward the rear of the vehicle.

35. Secure the differential to the previously installed drop brackets (91-9480 Drvr and 91-9483 Pass) using the supplied hardware. Snug all differential mounting hardware to secure the differential location at this time, but **DO NOT** torque at this time. See ILLUSTRATIONS 6.
36. Check clearance between the differential and the trimmed area of the frame. If needed, remove

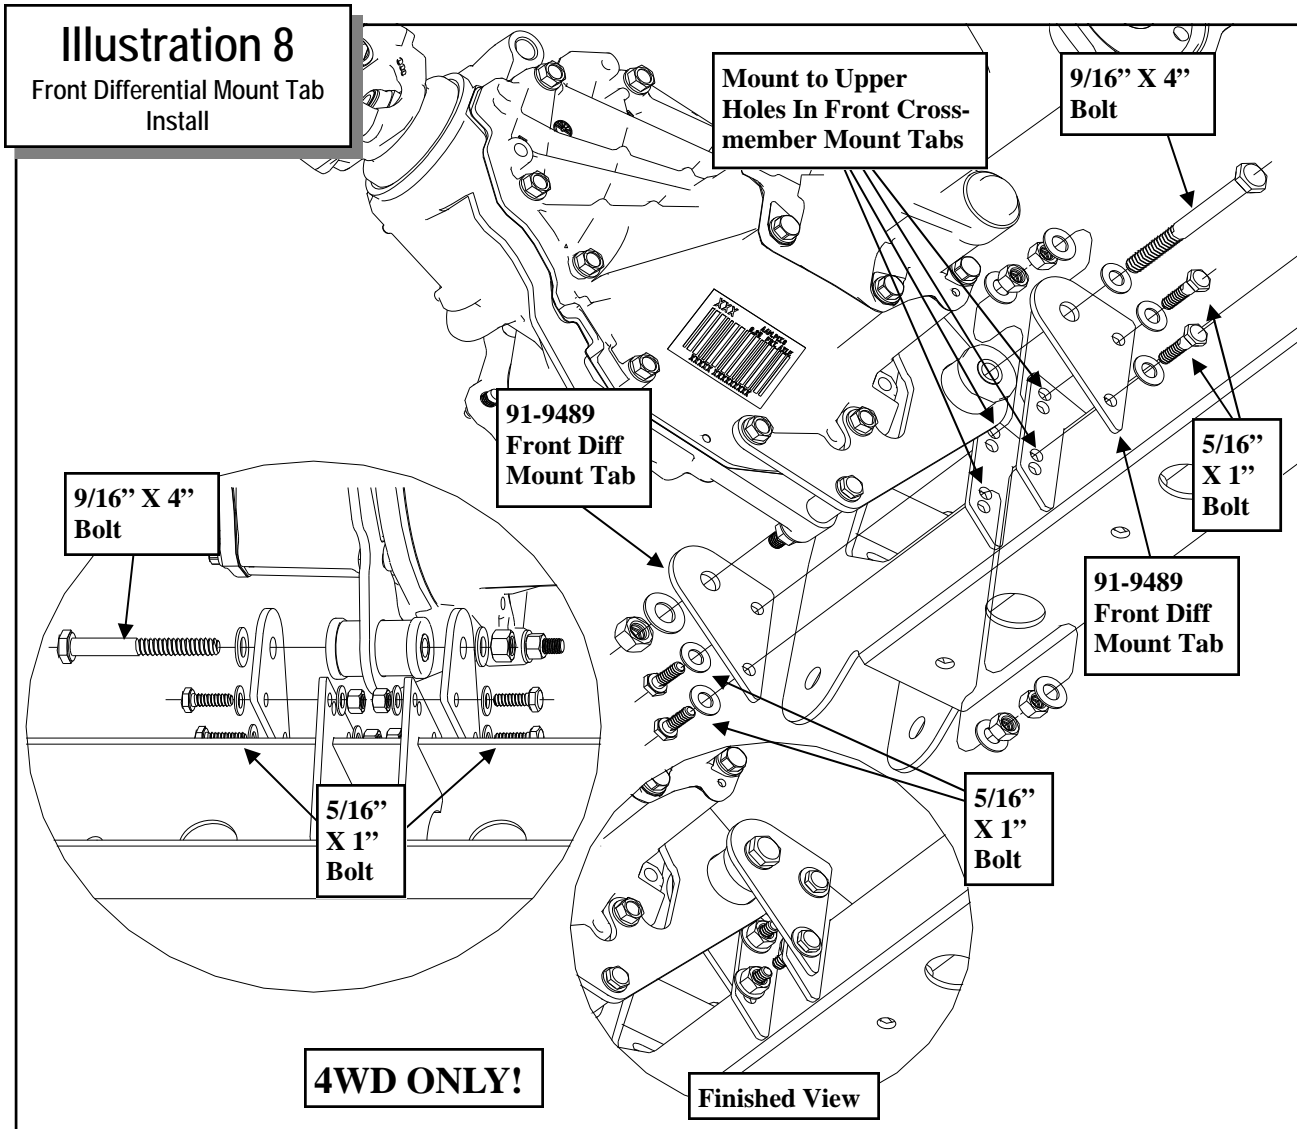

more material until adequate clearance is achieved.

37. After verifying there is an adequate amount of clearance, thoroughly clean and paint the trimmed areas with a good quality paint to prevent rust.
38. Install the front crossmember (91-3684) into the front mounting pockets by sliding one end of the crossmember into the driver side mounting pocket from the outside. Push the installed end of the crossmember as far as it will go to the passenger side in the mounting pocket. Swing the crossmember up into the passenger side pocket. Center the crossmember in the mounting pockets and secure using the OE bolts. See ILLUSTRATION 7.

NOTE: DO NOT cut the front crossmem-


ber frame mounting pockets.

NOTE: On 2WD model, sandwich the lower mounting portion of the skid plate in between the frame and the front crossmember.

39. Install the front differential tabs (91-9489), from hardware pack (90-6941), to the upper holes in the welded mounting tabs on the front crossmember using the supplied 5/16" X 1" bolts and hardware. See ILLUSTRATION 8.

NOTE: Be sure to bolt the tabs (90-3691) to the outside of the welded crossmember mounting tabs.

40. Secure the diff mount tabs to the front differential support bracket (91-3692) using the using the 9/16" X 4" bolt and hardware.
41. Install the rear crossmember (91-9490) into the

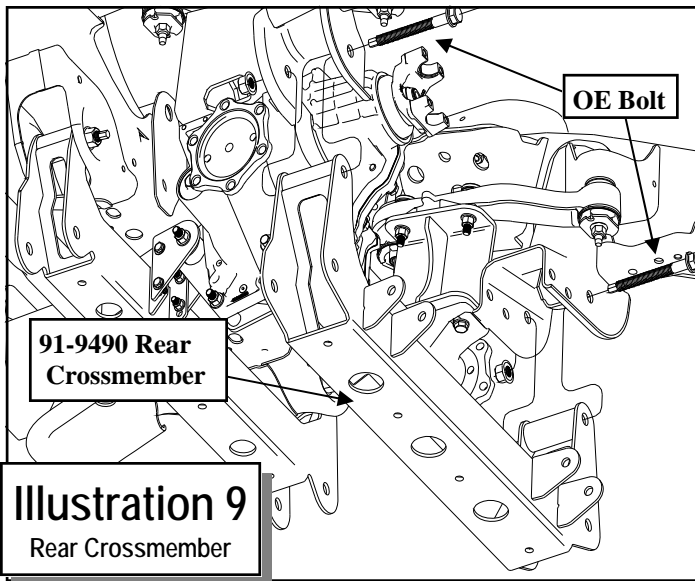

rear mounting pockets using the **OE** bolts. See ILLUSTRATION 9.

NOTE: Be sure to check for clearance against the frame.


42. Reinstall the front driveshaft to the front differential using the previously removed **OE** hardware.

43. Reattach the wiring harness, wiring clips and the vent tube to the differential.

IMPORTANT: Secure the vacuum line out of the way of the steering rack.

NOTE: The differential vent tube may need to be carefully pulled down to provide more slack for its new mounting position.

44. Unbolt the CV axle retaining nut and remove the CV axle from the **OE** knuckle.

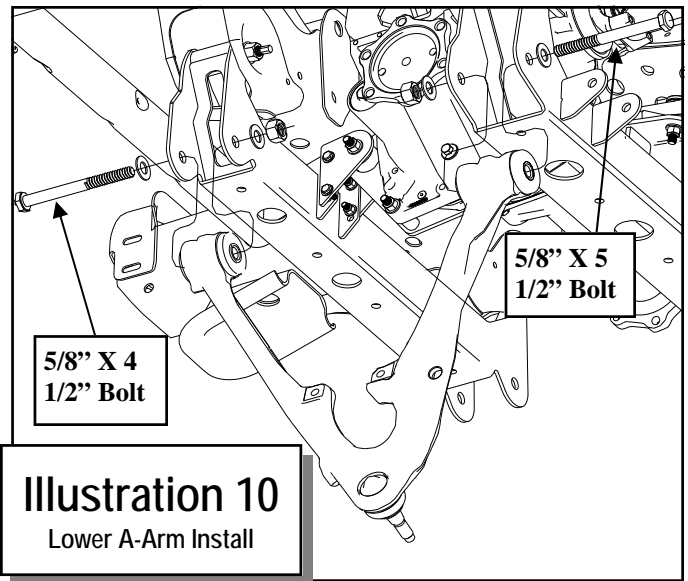




45. Separate the knuckle from the lower control arm and remove the **OE** knuckle.

46. Disassemble the **OE** knuckle on your work bench, remove the bearing hub assembly from the **OE** knuckle by removing the **OE** bolts. Save the mounting bolts, bearing, and dust shield for re-use. Discard the **OE** knuckles

47. Reassemble the bearing hub and brake dust shields into the new Pro Comp steering knuckle (For kit 51014B: 90-4570 Drvr and 90-4571 Pass For kit 51015B: 90-4573 Drvr and 90-4574). Make sure that the ABS wiring is oriented in exactly the same position as it came from the **OE** knuckle and out of the way of the tire.

NOTE: The **OE** aluminum knuckles come equipped with a spacer plates. The spacer plates will not be reinstalled to new knuckles.

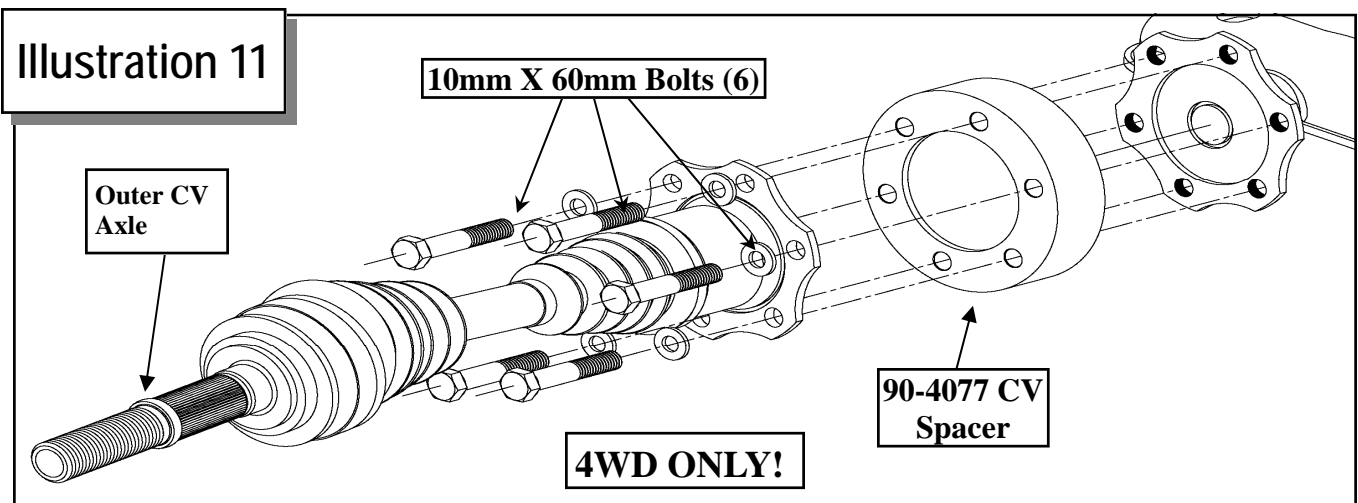

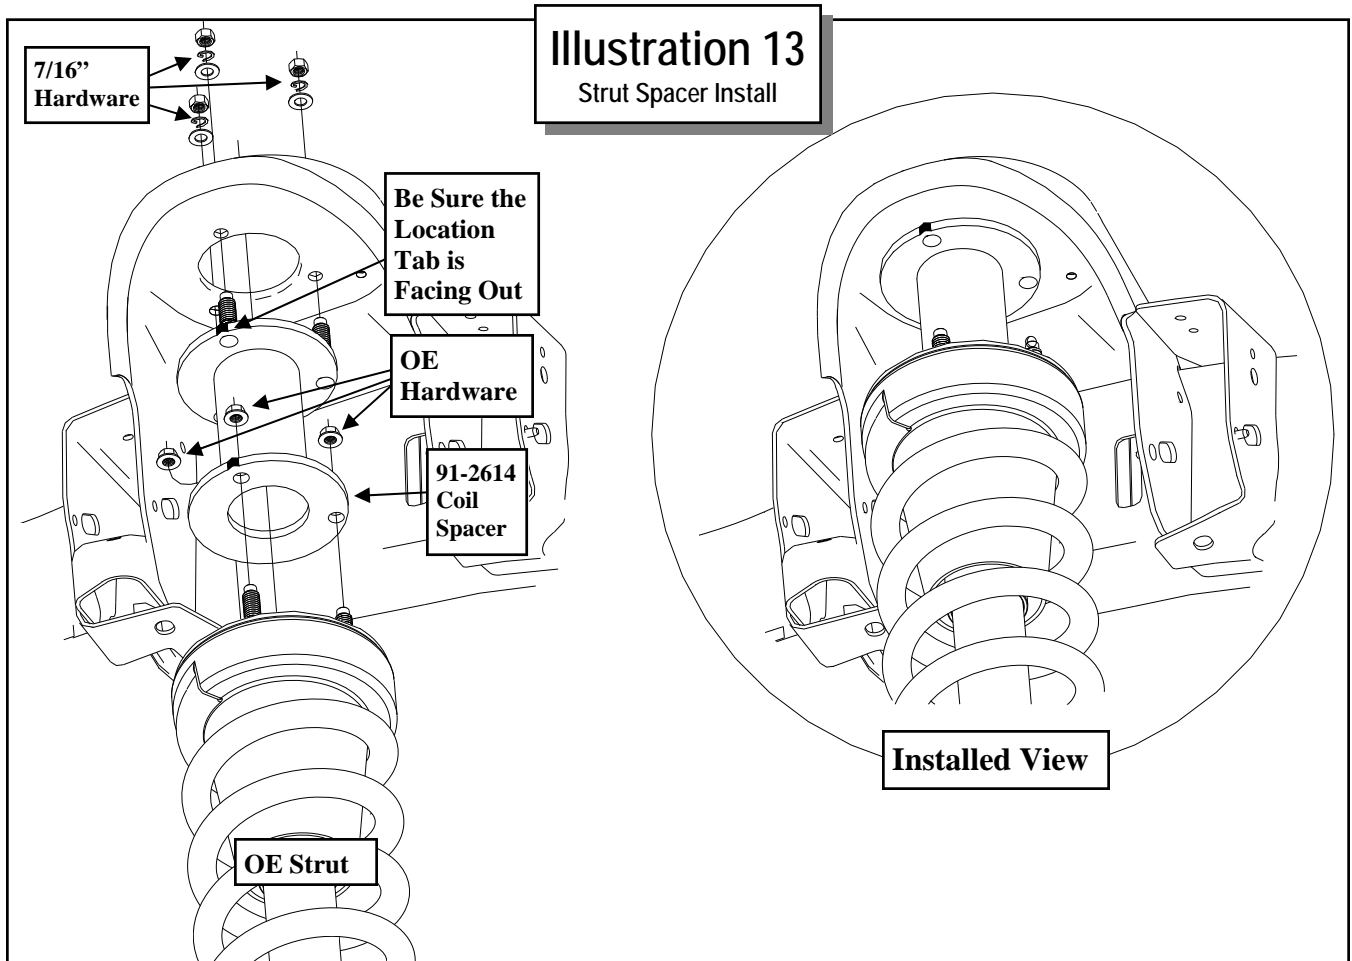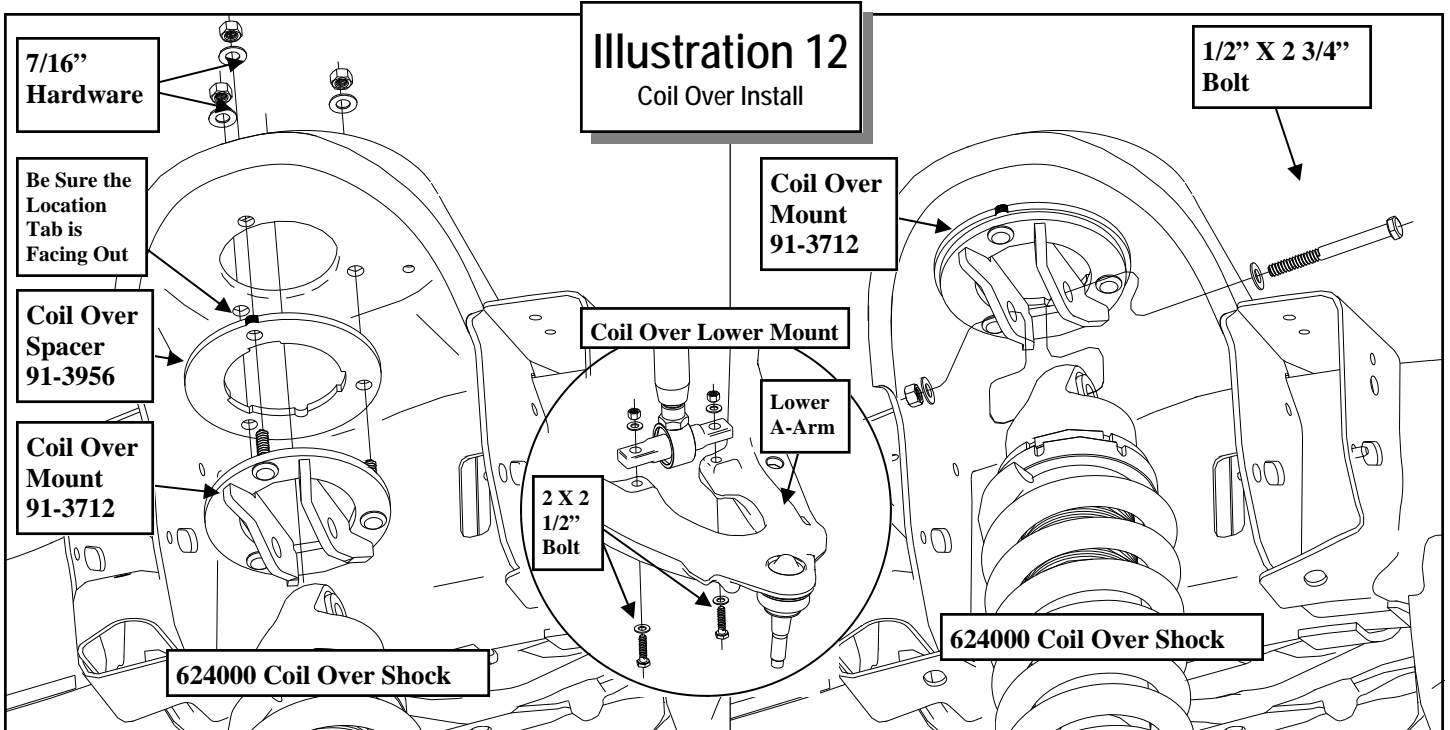

48. Torque the bearing to the knuckle with the **OE** bolts. Torque to 133 ft./lbs. Repeat on the other side.
49. Install the lower A-arms into the crossmember mounting pockets. Secure using the supplied **5/8" X 4 1/2"** bolts and hardware in the front pocket and the supplied **5/8" X 5 1/2"** bolts and hardware in the rear pocket.
50. Install the new knuckle to the lower ball joint. Torque the lower ball joint nut **74** ft./lbs.
51. Secure the CV axle and the CV spacer (**90-4077**) to the differential using the supplied **10mm X 60mm** bolts and washers. See ILLUSTRATION 11.
52. Install the new knuckle to the upper ball joint. Start the nut and leave hand tight until Coil over installation is complete.
53. Reinstall the CV shaft washer and retaining nut

to CV axle. Torque this nut to factory specifications. (See your GM service manual for details)

54. **WITH THE COIL OVERS**, insert the mono ball spacers (**90-2433**) from pack (**90-6492**) in the top of the coil over as shown in ILLUSTRATION 12.

NOTE: The spacers are a tight fit. A press might be needed to fit the spacers into the mono balls.

55. Install the new Pro Comp coil over shock (**624000**) to the coil over mount upper bracket (**91-3712**) with the supplied **1/2" X 2 3/4"** hardware from hardware pack (**90-6318**).
56. Install the **1/4"** spacer (**91-3956**) onto the upper coil over mount upper bracket studs. See ILLUSTRATION 12.

NOTE: Be sure that the locating tab on the coil spacer is facing toward the outside of the vehicle.

57. Fasten upper bracket to the vehicle using the supplied **7/16"** hardware on the top from hardware pack (**90-6317**) and torque to 45-50 ft./lbs. See ILLUSTRATION 12.


IMPORTANT!: Be sure the OE wiring harness clips are reinstalled to the strut spacer studs. Failure to do so may result in the wiring harnesses being damaged by the steering column.


58. Secure the lower coil over shock cross pin to the lower A-arm using the supplied **7/16" X 2 1/2"** bolts and hardware. Torque according to the chart on page **24**. See ILLUSTRATION 12.

NOTE: Supplemental instructions for MX coil over installation are located in box 51007BMX-6/51207BMX-1.

59. **WITH THE STRUT SPACERS**, attach the strut spacer (**91-2614**) to the top of the strut using the **OE** hardware. Torque to manufacturers specifications.
60. Fit the strut and spacer assembly into the stock mounting locations. Fasten using the supplied hardware on the top from hardware pack (**90-6317**) torque to 45-50ft./lbs. See ILLUSTRATION 5.

NOTE: Be sure that the locating tab on the top ring of the strut spacer is facing toward the outside of the vehicle.

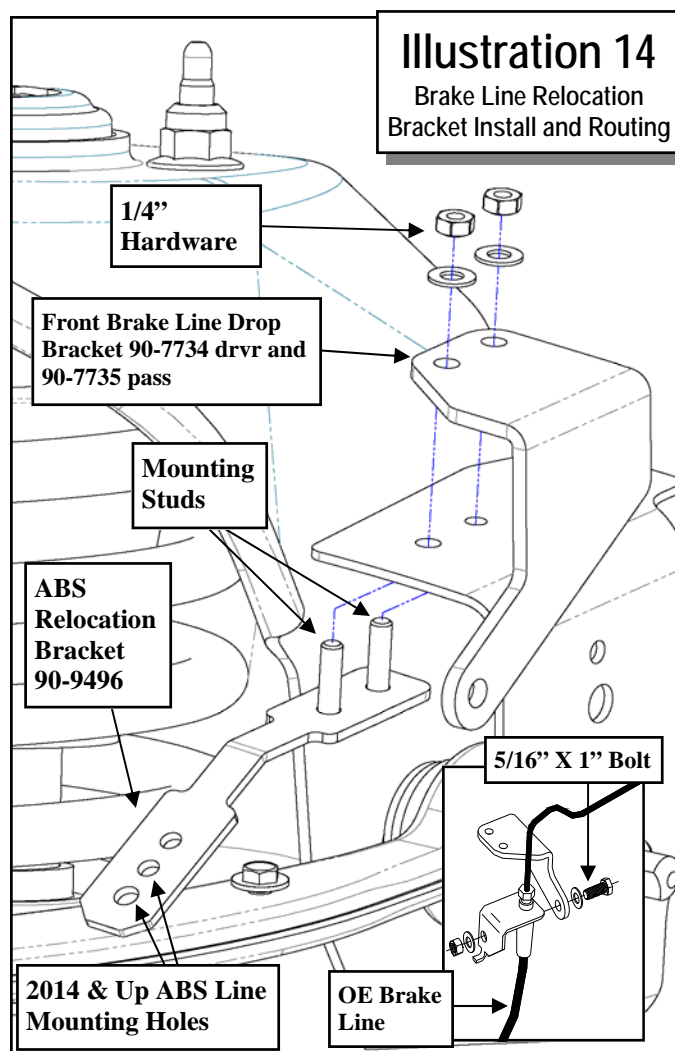

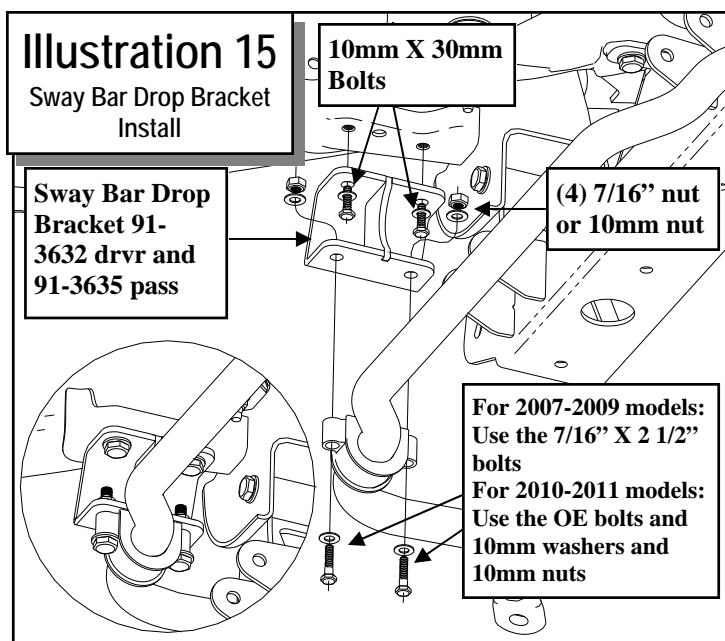

IMPORTANT!: Be sure the OE wiring harness clips are reinstalled to the strut spacer studs. Failure to do so may result in the wiring harnesses being damaged by the steering column.

61. Secure the lower strut cross pin to the lower A-arm using the OE bolts. Torque the bolts according to the manufacturers specifications. See ILLUSTRATION 5.
62. Repeat 54 through 58 (for use with coil over) or 59 through 61 (for use with OE strut) on the remaining side of the vehicle.
63. Torque the upper ball joint nut to 37 Ft./lbs.
64. Be sure to re-clip the previously removed upper strut mount wiring away from any moving parts, steering shaft or exhaust manifolds.
65. Work on one side of the vehicle at a time.
66. Torque all the differential, upper crossmember bolts and coil over hardware according to the torque chart on page 24 or to factory specifications. **DO NOT** torque the lower A-arm until the vehicle is on the ground.
67. Unbolt the rubber brake line bracket from the upper coil bucket. Discard the OE bolt.
68. Unclip the OE metal brake lines from the frame clips and carefully bend to provide enough slack in the line for it's new position.

NOTE: Be sure that the metal lines do not

rub or contact anything.

69. Install the ABS line relocation bracket (90-9496) studs, from the bottom, into the existing holes in the rear of the upper control arm pocket. Install the brake line relocation bracket (90-7734 drvr and 90-7735 pass) to the ABS relocation bracket mounting studs. Secure using the supplied 1/4" washers and nuts. See ILLUSTRATION 14.
70. Bolt the brake line to the previously installed brake line relocation bracket (90-7734 drvr and 90-7735 pass) using the supplied 5/16" X 1" bolt. See ILLUSTRATION 14.
71. Reinstall the rotors and brake calipers to the new knuckle using the previously removed OE bolts. Be sure to use thread locker on the caliper bracket mounting bolts. Torque to factory specifications.

NOTE: It may be necessary to carefully bend the caliper banjo fitting slightly up to provide adequate slack for the brake line. Be very careful not to damage the banjo fitting or brake line in any way. Check tightness of banjo bolt after modification.



72. Route the ABS wire through the factory clips on the upper A-arm. Secure the ABS line to the (2) lower mounting holes in the relocation bracket (90-9496). The ABS line plastic push pin will install to one hole and the locating tab will install into the remaining hole. See ILLUSTRATION 14.

NOTE: On some vehicles the driver's side OE wire harness that connects to the ABS wire may be shorter, from the factory, than others. If the line needs to be extended GM #19149296 (ACD#PT2232) can be installed into the chassis wire harness.

73. Reattach the ABS wiring and secure it to the top hole on the knuckle using the supplied Adel clamp and supplied OE bolt and washer. See ILLUSTRATION 14.

NOTE: The Adel clamp has a flat side and a rounded side, make sure the flat side is facing out toward the tire.

74. On both sides of the vehicle loosen the jam nut and remove the outer tie rod ends and jam nuts.

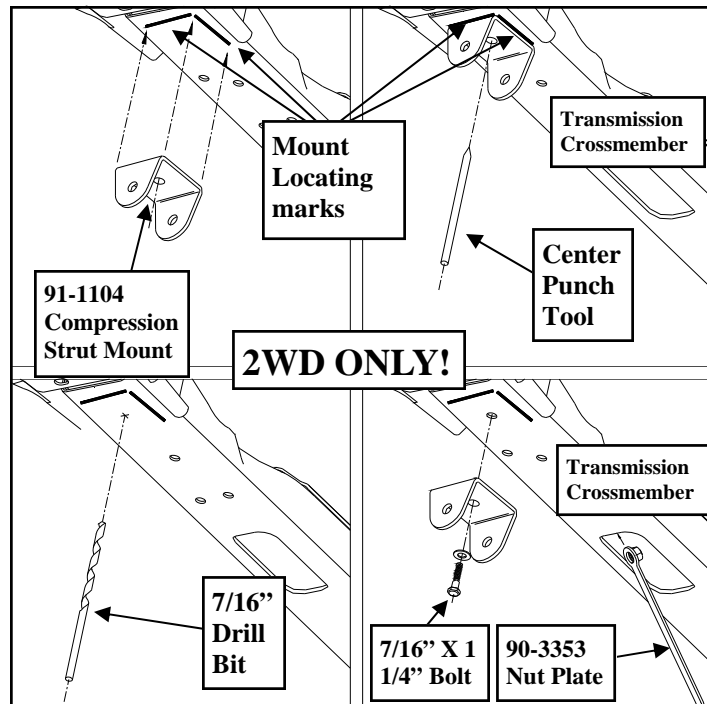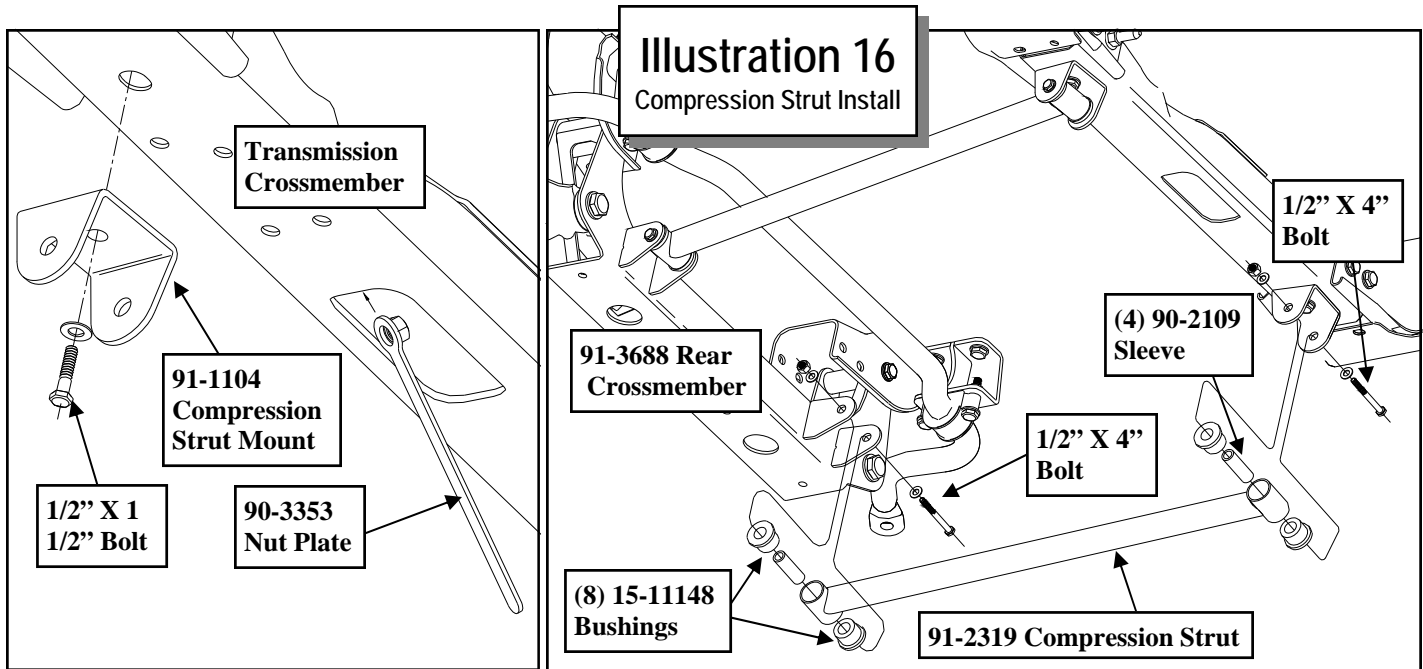

75. The inner and outer tie rod ends may need to be shortened. Measure in **9/16"** from the end of the inner tie rod end and scribe a line. Measure in **7/16"** from the end of the outer tie rod end and scribe a line. Using a suitable cutting tool, (abrasive cutoff wheel, Sawz-all, etc.) cut the ends along the previously marked line. Be sure the cut is made straight and square or else the jam nut will not hold it's torque properly.

76. Install the supplied **16mm** jam nuts onto the

inner tie rods. Thread the jam nut and outer tie rod ends on as far as they will go on the inner tie rods with the stud facing down.

77. Reinstall the outer tie rod ends onto the inner tie rod ends. Thread them on as far as they will go with the stud facing down.

78. Insert from the top and secure the tie rod end to the knuckle and torque to factory specifications. Be sure to clean the threads and use thread

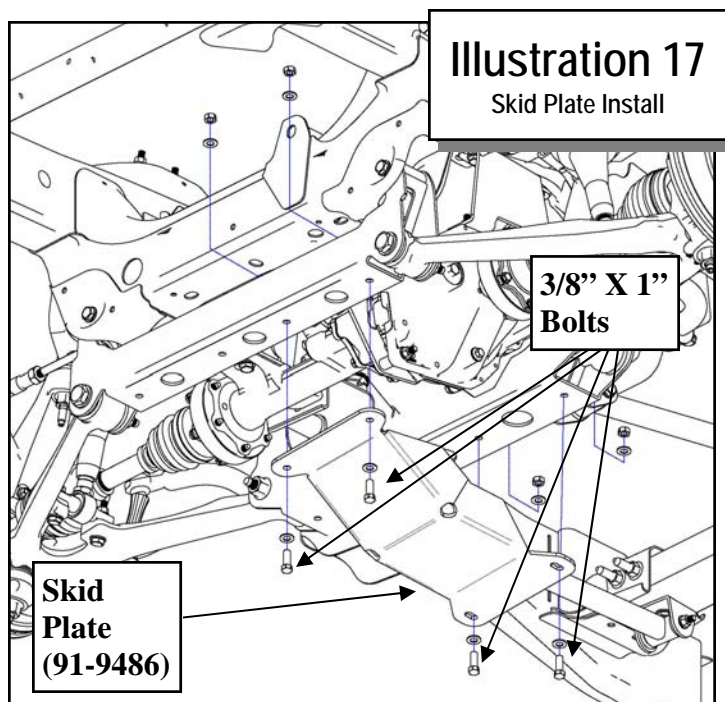


Illustration 17

Skid Plate Install

3/8" X 1" Bolts

Skid Plate (91-9486)


locking compound on the tie rod end nut.

79. Install the sway bar drop brackets (**91-3632 drv** and **91-3635 pass**) to the original sway bar mounting holes in the frame, angled toward the rear of the vehicle, using the supplied **10mm-1.5 X 30mm** bolts and hardware. See ILLUSTRATION 15.
80. Using the previously made sway bar orientation markings as a guide, flip the sway bar **180** degrees and reinstall it to the sway bar drop brackets using the supplied **7/16" X 2 1/2"** bolts and hardware for **2007-2009** models or the previously removed **OE** bolts and **10mm** flat washers and **10mm** nuts for **2010-2012** models. Leave hardware loose at this time. See ILLUSTRATION 15.
81. Install the previously removed **OE** sway bar end links into their original location on the lower A-arms. See ILLUSTRATION 15.
82. Reconnect the sway bar end links to the sway bar.
83. Torque the sway bar hardware according to the torque chart on page **24**.
84. Install the bushings (**15-11148**) and sleeves (**90-2109**) from hardware pack (**90-6263**) into the compression struts (**91-2319**).

85. **On 4WD models:** Using the existing outer holes attach the compression strut mounts (**91-1104**) to the transmission crossmember. Use the supplied **1/2" X 1 1/2"** bolt and nut plate (**90-3353**) to secure the mounts to the crossmember. See ILLUSTRATION 16.
86. **On 2WD models:** Rotate the compression strut up to contact the transmission crossmember. Use the bracket as a template and scribe the outline of the mount on the transmission crossmember. See ILLUSTRATIONS 16.
87. Carefully lower the compression strut from the transmission crossmember.
88. Unbolt the compression strut mount (**91-1104**) from the compression strut. See ILLUSTRATIONS 16.
89. Using the previously scribed locating marks on the transmission crossmember as a guide, place the compression strut mount inside the locating marks. Mark the hole for drilling. See ILLUSTRATIONS 16.
90. Center punch and drill out the previously applied mark in the transmission crossmember to **7/16"**. See ILLUSTRATIONS 16.
91. Secure the compression strut mount (**91-1104**) to the drilled hole in the transmission crossmember using the supplied **7/16" X 1 1/4"** bolt and nut plate (**90-3553**). See ILLUSTRATION 16.
92. **2WD and 4WD models:** Rotate the compression struts up and secure them to the crossmember mounts using the supplied **1/2" X 4"** bolt and hardware. See ILLUSTRATION 16.
NOTE: The wires can be trimmed off the end of the comp strut nut plates at this time.
93. Torque compression strut hardware according to the torque chart on page **24**.
94. On both sides of the vehicle, check the routing of the brake lines and the ABS wire harnesses. There must be no pinching, rubbing, or stretching of either component. Use zip ties to secure these items to the steering components. At full droop, cycle the steering from lock to lock while observing the reaction of these components. Reposition them if needed.

Illustration 18

OE Skid Plate Trim Pic

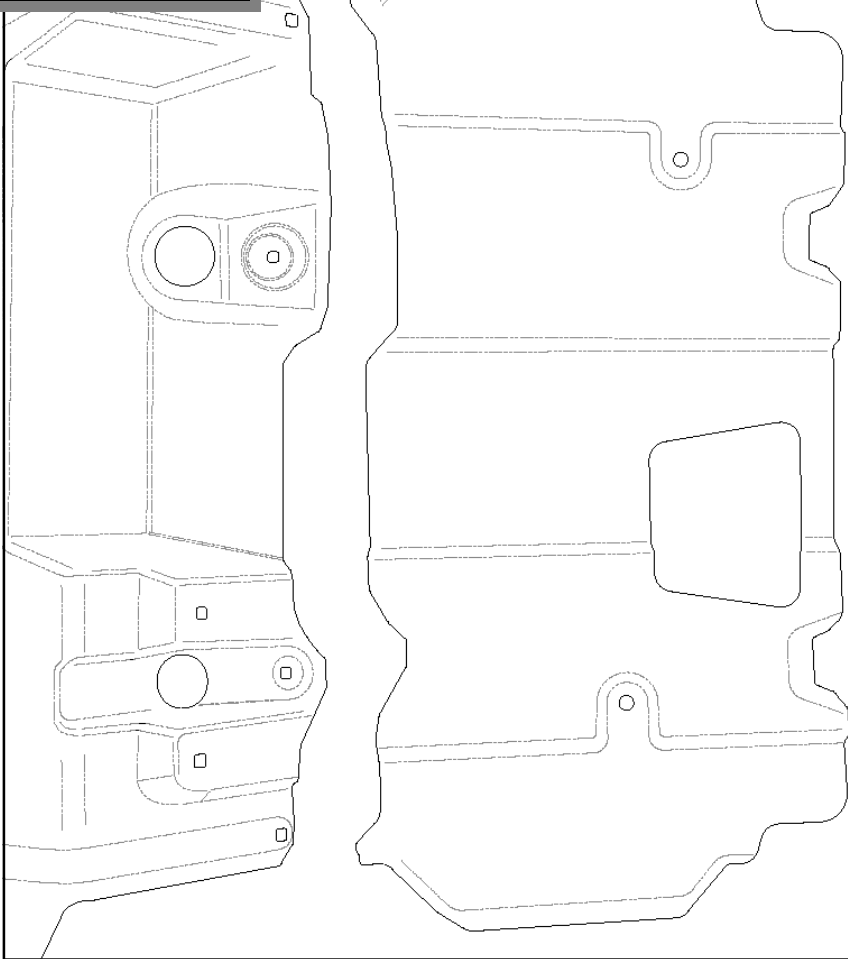

95. On some vehicles the driver's side OE wire harness that connects to the ABS wire may be shorter, from the factory, than others. If the line needs to be extended GM #19149296 (ACD#PT2232) can be installed into the chassis wire harness. Check the harness at full droop, if it is too tight it may cause the ABS light to activate.
96. With the front wheels installed cycle the steering from lock to lock to check to make sure the front wheels have enough clearance in the wheel well. If the wheel contacts the front or rear of the wheel well some trimming will be necessary. Check the caliper banjo fitting to ensure the line has the proper amount of slack.

NOTE: Remove OE rotor/drum retaining clips from wheel studs before installing the wheels.

97. Install the skid plate (91-9486) to the mounting holes on the front and rear crossmembers using the supplied 3/8" X 1" bolts and hardware. See ILLUSTRATION 17.

98. Reinstall the OE skid plate using the previously removed OE bolts and provided spacers (90-9487 and 90-9488).

NOTE: The OE skid plate will need to be trimmed in order to be reinstalled. See ILLUSTRATION 18.

99. Lower the vehicle to the ground. Torque the lug nuts according to the wheel manufacturers recommendations.

100. With the truck on the ground torque the lower A-arm bolts according to the torque chart on page 24.

101. Center the steering wheel and lock it in place. Set the toe by adjusting the tie rod ends properly.

IMPORTANT!: If the steering wheel and front wheels are not centered properly it will trigger the anti-lock brake and traction control warning lights.

102. Lock the outer tie rod ends by tightening the 16mm jam nuts.

103. Recheck all hardware for proper installation and torque at this time.


IMPORTANT! BE SURE TO BRING THE VEHICLE IMMEDIATELY TO A REPUTABLE ALIGNMENT SHOP TO BE ALIGNED!

NOTES:

- ⇒ On completion of the installation, have the suspension and headlights re-aligned.
- ⇒ After 100 miles recheck for proper torque on all newly installed hardware.
- ⇒ Recheck all hardware for tightness after off road use.

REAR INSTALLATION:

1. Raise the rear of the truck enough for the tires to clear the ground and use jack stands on the frame to support the truck. Remove the rear tires and wheels.
2. Carefully remove the **OE** shock absorbers. It may be necessary to raise the differential housing slightly to facilitate their removal.
3. Unbolt the **OE** bump stops from the frame. Save the bump stops for reuse.
4. Unbolt the driver side emergency brake line hanger from the frame rail. Save the **OE** bolt for reuse.
5. Unclip the rubber ABS line from the frame rails.
6. Unbolt the rear brake line bracket from the rear axle differential housing. Save the **OE** bolt for reuse.
7. One side at a time, support the differential housing on the side being modified. Remove the "U" bolts from that axle end and discard. Carefully lower the differential away from the **OE** springs. Remove and discard the **OE** riser block from its mount pad. Take careful note of the position of the factory spring packs.

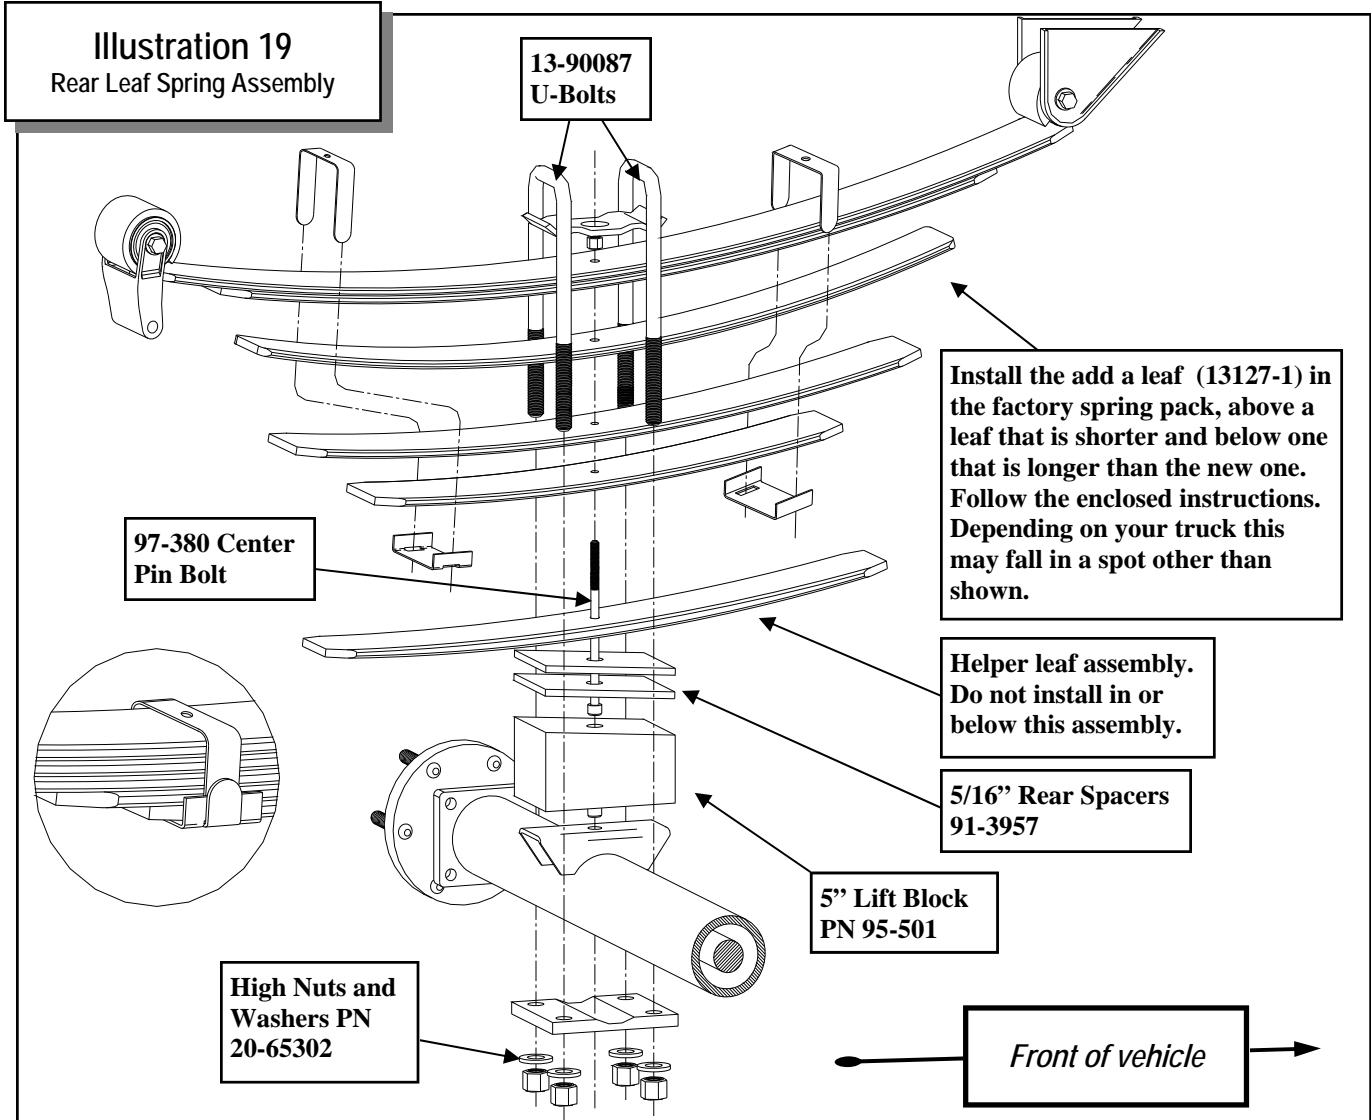

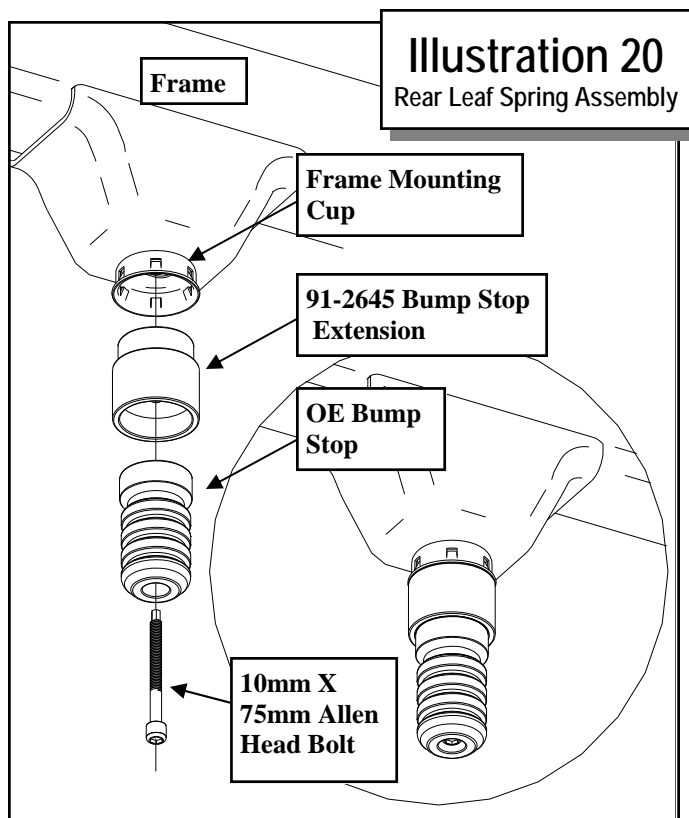


Illustration 20
Rear Leaf Spring Assembly

ADD-A-LEAF (13127-1) INSTALLATION

NOTE: In order to properly install the add-a-leaf spring, it will be necessary to contain the elasticity in the leaf spring with “C” clamps when the center bolt is removed. Some springs have a factory helper spring consisting of one or more flat leaves installed at the bottom of the leaf pack. **DO NOT** install the add-a-leaf spring in or below the helper spring.

8. Hold the spring assembly securely together with “C” clamp. If necessary remove any spring leaf alignment clamps. Remove the spring center bolt. A hammer and drift punch may be used to drive it out if necessary.
9. Carefully remove “C” clamps and lay unassembled leaves aside.

NOTE: Add-a-leaf will be placed in the spring assembly progressively according to length. For example, if the existing leaves are 32” long and 25” long and the add-a-leaf is 28” long, place the add-a-leaf between the existing leaves.

10. Apply a small amount of grease to the end of

the add-a-leaf, place it in the spring assembly as described in the note above, and reassemble the leaf springs using the “C” clamps. Insert the new center bolt (97-380) and the (2 *per side*) 5/16” spacer plate (91-3957) under the factory overload spring. Torque the center bolt nut to 20 ft./lbs. With a hacksaw, cut the center bolt even with the top of the nut.

NOTE: The short side of the spacer will face toward the front of the vehicle.

11. Loosely assemble the complete spring assemblies into their respective axle mounts. As shown in **ILLUSTRATION 19**, place the 5” (95-501) blocks in position. Make sure the pin in the block is in the hole of the axle housing spring pad. The short end of the block goes toward the front of the vehicle. Install the block so the pinion moves up.

NOTE: The block pin may need to be ground down so that the block sits flat on the perch if you are not installing traction bars at this time.

12. Install the new “U” bolts (13-90087) over the leaf spring assembly and using the new washers and nuts supplied along with the existing spring plates, torque the U-bolt nuts to 105 ft./lbs. See **Illustration 19**.
13. Repeat these steps on the other side of the vehicle.
14. Reattach the emergency brake line hanger to the frame rail using the previously removed **OE** bolt.
15. Bolt the rear brake line extension bracket (90-3341) to the rear axle differential housing using the previously removed **OE** bolt.
16. Carefully rotate the rubber brake line factory bracket assembly toward the rear of the vehicle and bolt it to the newly installed extension bracket (90-3341) using the supplied 5/16” X 1” bolt and hardware from pack (90-6299).
NOTE: Be sure that the metal lines do not rub or contact the rear end housing.
17. Bolt the **OE** rear bumps stop and supplied

bump stop spacer (**91-2645**) to the original frame mounting position using the supplied **10mm X 75mm** Allen head bolt and washer. See ILLUSTRATION 20.

18. Before installing your new Pro Comp shock absorbers, it is necessary that you check for adequate clearance. Temporarily install your Pro Comp shocks (**928001, MX6098, or ZX2001**) into the shock mounts. Carefully check for clearance issues. If there are areas that come in contact with or are very close to your new shocks, carefully remove sufficient material to ensure trouble free operation. Pay particular attention to the area around the lower shock mount. When all clearance issues have been resolved, install your new Pro Comp shock absorbers and recheck all fasteners for proper installation and torque. You can install the **MX6** or **ZX** shocks either shaft up or shaft down.
19. Install your wheels and tires and lower the vehicle to the ground.
NOTE: Remove OE rotor/drum retaining clips from wheel studs before installing the wheels.
20. After installation is complete, double check that all nuts and bolts are tight. Refer to the chart at the end of this document for torque specifications. (Do not retighten nuts and bolts where thread locking compound was used).

NOTES:

- ⇒ **On completion of the installation, have the suspension and headlights re-aligned.**
- ⇒ **After 100 miles recheck for proper torque on all newly installed hardware.**
- ⇒ **Recheck all hardware for tightness after off road use.**
- ⇒ **If upon completion the vehicle sit higher than desired, height can be taken out by removing one of the 5/16" spacers from the rear spring pack.**

Final notes:

1. If new tires are installed that are more than 10% taller than original tires, the speedometer must be recalibrated for the rear wheel anti-lock brake system to function properly. Contact an authorized GM dealer for details on recalibration.
2. With vehicle on the floor, cycle the steering from lock to lock and inspect the steering, suspension and driveline systems for proper operation, tightness and adequate clearance. Recheck brake hose/fittings for leaks. Be sure all brake lines are long enough for safe operation.
3. Have headlights readjusted to the proper settings.
4. Realign front end to factory specifications. Be sure the vehicle is at the desired ride height prior to realignment.
5. Recheck ALL fasteners at 100 miles to make sure they have not come loose. Due to the additional wear and tear created by larger tires and wheels, we recommend that you periodically check the suspension system and steering components to ensure service life and safe vehicle operation.


Bolt Torque and ID

Decimal System

Metric System

All Torques in Ft. Lbs.


Bolt Size	Grade 5	Grade 8	Bolt Size	Class 9.8	Class 10.9	Class 12.9
5/16	15	20	M6	5	9	12
3/8	30	45	M8	18	23	27
7/16	45	60	M10	32	45	50
1/2	65	90	M12	55	75	90
9/16	95	130	M14	85	120	145
5/8	135	175	M16	130	165	210
3/4	185	280	M18	170	240	290

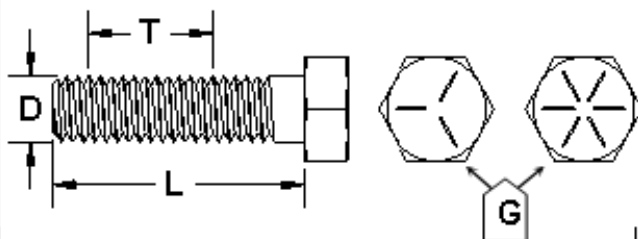

1/2-13x1.75 HHCS



Grade 5 Grade 8
(No. of Marks + 2)

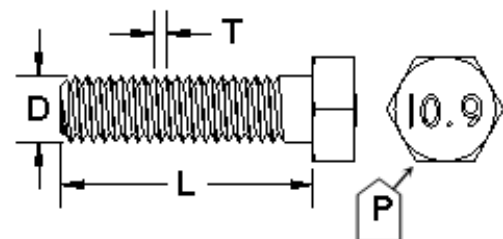

M12-1.25x50 HHCS



G = Grade (Bolt Strength)
D = Nominal Diameter (Inches)
T = Thread Count (Threads per Inch)
L = Length (Inches)
X = Description (Hex Head Cap Screw)

P = Property Class (Bolt Strength)
D = Nominal Diameter (Millimeters)
T = Thread Pitch (Thread Width, mm)
L = Length (Millimeters)
X = Description (Hex Head Cap Screw)

Revision Page:



The PRO COMP PROMISE WARRANTY

At Pro Comp, we know you have many choices when selecting products to personalize your vehicle. You should demand nothing but the highest quality available and have total confidence that the products you selected are the best in the industry. It is for these reasons that Pro Comp Suspension products are backed by the best warranty in the industry...the Pro Comp Promise!

Pro Comp promises that its products will last a lifetime or we will replace it free of charge. It's that simple! Because of our commitment to quality and manufacturing excellence, we are able to stand behind our products. FOREVER.

It is Pro Comp's Promise that if one of our suspension products breaks not due to misuse, neglect or vandalism, we will replace it. Whether you are the original purchaser or not, you can be assured that we will make it right. The Pro Comp Promise covers all suspension products including shocks and steering stabilizers. Buy Pro Comp Suspension today and enjoy it for the rest of your life!

That's our Pro Comp Promise!

Notice to Owner, Operator, Dealer and Installer:

Vehicles that have been enhanced for off-road performance often have unique handling characteristics due to the higher center of gravity and larger tires. This vehicle may handle, react and stop differently than many passenger cars or unmodified vehicles, both on and off-road. You must drive your vehicle safely! Extreme care should always be taken to prevent vehicle rollover or loss of control, which can result in serious injury or even death. Always avoid sudden sharp turns or abrupt maneuvers and allow more time and distance for braking! Pro Comp reminds you to fasten your seat belts at all times and reduce speed! We will gladly answer any questions concerning the design, function, maintenance and correct use of our products.

Please make sure that the Dealer / Installer explains and delivers all warning notices, warranty forms and instruction sheets included with Pro Comp product.

Warranty and Return Policy:

Pro Comp warrants its full line of products to be free from defects in workmanship and materials for the life of the product. Pro Comp's obligation under this warranty is limited to repair or replacement, at Pro Comp's option, of the defective product. Any and all costs of removal, installation, freight or incidental or consequential damages are expressly excluded from this warranty. Pro Comp is not responsible for damages and / or warranty of other vehicle parts related or non-related to the installation of Pro Comp product. A consumer who makes the decision to modify his vehicle with aftermarket components of any kind will assume all risk and responsibility for potential damages incurred as a result of their chosen modifications. Warranty coverage does not include consumer opinions regarding ride comfort, fitment and design. Warranty claims can be made directly with Pro Comp or at any factory authorized Pro Comp dealer.

IMPORTANT! To validate the warranty on this purchase please be sure to mail in the warranty card.

Claims not covered under warranty

* Parts subject to normal wear; this includes bushings, bump stops, ball joints, tie rod ends and heim joints.

* Finish after 90 days.

* Damage caused as a result of not following recommendations or requirements called out in the installation manuals.

Pro Comp MX Series coil-over shocks are considered a serviceable shock with a one-year warranty against leakage only. Rebuild service and replacement parts will be available and sold separately by Pro Comp. Contact Pro Comp for specific service charges. Pro Comp accepts no responsibility for any altered product, improper installation, lack of or improper maintenance or improper use of our products.

E-Mail: info@procompusa.com
Website: www.procompusa.com
Fax: (310) 747-3912
Ph: 1-800-776-0767

PLACE
WARRANTY REGISTRATION
NUMBER
HERE: _____